

# LFSTBEB8450 Quick Start Guide

STEP  
1

**Unpack the board.  
Verify package contents  
according to the kit Web  
site: [www.freescale.com/  
sensortoolbox](http://www.freescale.com/sensortoolbox)**

Assemble the hardware by connecting a development board to the interface board. This board is intended for use with an Accelerometer Interface Board, purchased separately. More information can be found on the Web site.

STEP  
2


**At [www.freescale.com/  
sensortoolbox](http://www.freescale.com/sensortoolbox)  
download the latest software  
version by clicking: [Download Software](#)**


All Sensor Toolbox kits use the same software and driver, so the install only needs to be done once. Follow the on-screen instructions to install the communication driver for the tool. Check back occasionally for software updates.

STEP  
3

**Plug in the USB and turn  
the board on using the  
power switch. Run the Sensor  
Toolbox link on your desktop.**

Explore other compatible kits at  
[www.freescale.com/sensortoolbox](http://www.freescale.com/sensortoolbox)

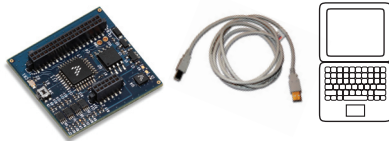

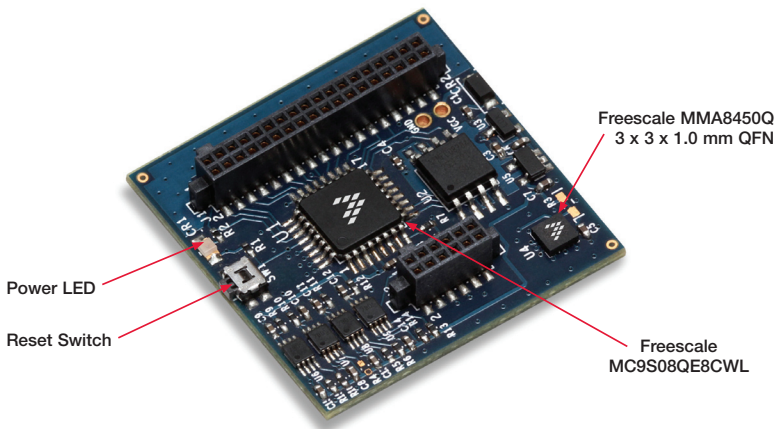

Learn more at [www.freescale.com/sensortoolbox](http://www.freescale.com/sensortoolbox).

Freescale and the Freescale logo are trademarks or registered trademarks of Freescale Semiconductor, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners. © Freescale Semiconductor, Inc. 2010.

Doc Number: LFSBEB8450ACCQSG / REV 0  
Agile Number: 926-78438 / REV A

